

How to use your Globalstar Satellite Phone

- ❑ This phone # _____ **Unlock code is SECRET.** (Ask and Remember it.)
- ❑ **Voice message** service is active. Call the satphone number (from any phone) to get messages. Interrupt greeting with the "5" key. (Older system enter '1' key.) Use the password (same as unlock code.)
- ❑ **You must be outside.** The more sky the better. The satellites are up there, moving fast.

Sat connections take up to one minute. Be patient.

1. **RAISE (rotate) the cigar-like Antenna on the side of phone, hold it VERTICAL while using.**
2. **POWER ON.** The 'info' key will display the phone number of this phone.


Using the Display – the white pointer buttons enable functions on the display, i.e., point to 'menu', or point to 'unlock'.

Using the menu - Point to the word MENU. Enter menu numbers, or Scroll with up/down buttons (see arrow keys at bottom of keypad. **CLR** key will back up.


3. **Unlock Phone** Point to the word 'UNLOCK' with the white pointer button. Enter pin code.
4. **Phone will search for Service.** When it registers with the satellite, you will see a **Satellite icon**, and an **antenna icon** with a **signal strength** of 3-4 bars. Just like a cell phone.



>>>> **WAIT until you see the 'i' icon** meaning the phone is ready to dial or receive a call.

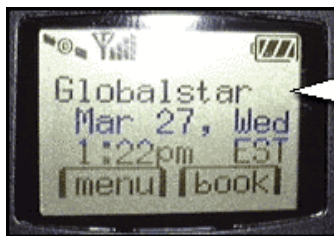

"i" is not present, phone will not place/receive calls.

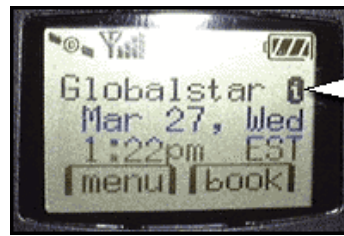

"i" is present, phone is registered. Will place/receive calls.

HOW TO DIAL (from US, to the US or Canada):

Dial 1 + area code + phone number. Press SEND. (antenna must be held vertically)

From US or Canada to dial another Country - dial 011 + country code + number.

If a voice reports "call can not be completed as dialed" - you are ROAMING and must dial with international method.

HOW TO DIAL from outside North America - "International Roaming"

Press & Hold '0' until a + sign appears. Then add 'country code, area code and number. SEND.

- The US country code is 1.
- Whether you own or rent the phone - Roaming calls cost more and long distance charges apply.
- The + sign is equivalent to the international access code for satphones, equal to '00'
- If calling into the country whose gateway you are already connected to – after the + sign, omit the country code but enter the area code + phone number.)

HOW people call you: This phone has a US (Texas) Area Code (254). They dial you normally. 1-254-etc.

If your phone is on and on the satellite, it will ring. Press SEND and talk. If OFF, they get voice mail.

How to Retrieve Voice Mail - A small icon (like a comic book dialog circle) notifies you of voice messages.

Menu-3 will inform what kind of messages you have.

Dial "your Globalstar Phone number" from your satphone or from any land line. Hear the greeting.

>> Enter '5' key to interrupt the greeting. Enter your password (same as unlock code).

>> **N.B. Older system – enter '1' to interrupt greeting.** If phone is new since May 06 – it will be on new system.

Listen to messages. Control keys are: 1=back. 2=pause. 3=skip. 7=erase. * =exit

For HELP - dial *611 send (free call) and Globalstar customer care will answer. Or dial 1-877-452-5782 (SEND).

For GPS position – press Menu, 4,3. point to word 'update'. Do this during a call in progress.